



## APPENDIX C. TEST SETUP PHOTOGRAPHS & EUT PHOTOGRAPHS

### Test Setup Photographs

LEFT-CHECK TOUCH

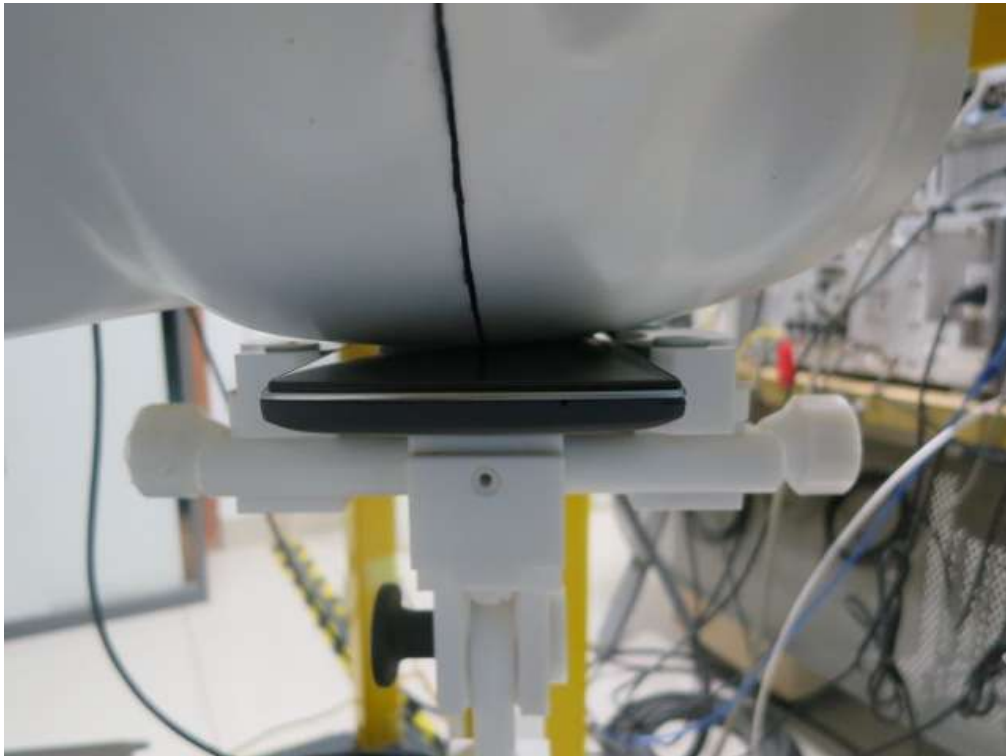

LEFT-TILT 15°

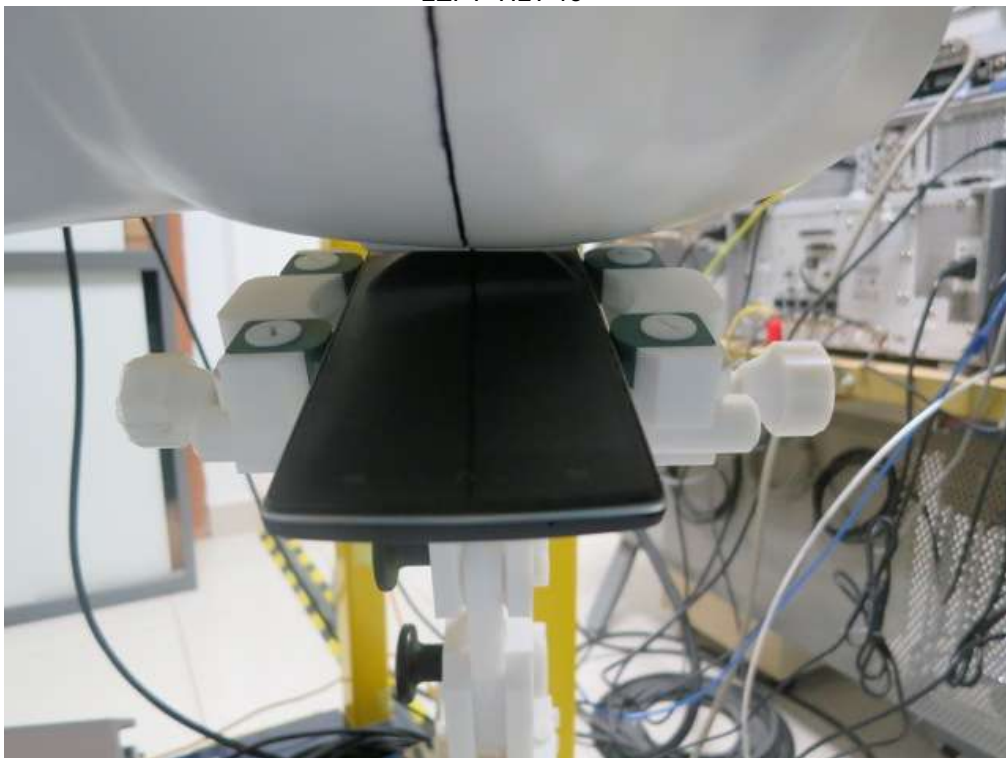

RIGHT-CHECK TOUCH



RIGHT-TILT 15°



Body Back 10mm



Body Front 10mm



Body Back with Headset



Body Front with Headset



Edge 4(Left)



Edge 2(Right)



Edge 3(Bottom)








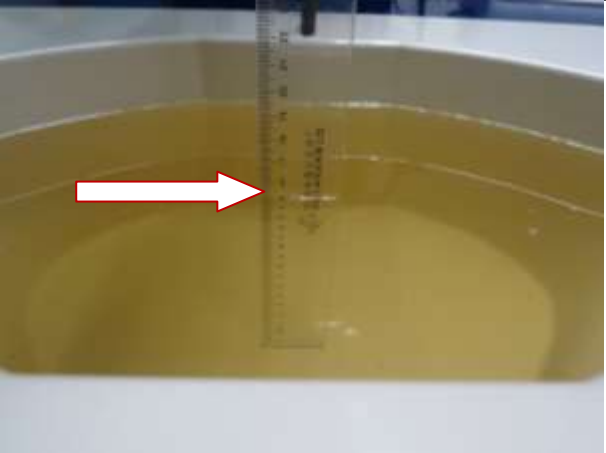
Edge 1 (Top)









**DEPTH OF THE LIQUID IN THE PHANTOM—ZOOM IN**

Note : The position used in the measurement were according to IEEE 1528-2013

|  |   |
|--|---|
| <p>850MHz head</p>  A photograph showing a ruler placed vertically inside a white phantom container filled with yellow liquid. A red arrow points to the liquid surface level on the ruler.   | <p>850MHz body</p>  A photograph showing a ruler placed vertically inside a white phantom container filled with yellow liquid. A red arrow points to the liquid surface level on the ruler.   |
| <p>1900MHz head</p>  A photograph showing a ruler placed vertically inside a white phantom container filled with clear liquid. A red arrow points to the liquid surface level on the ruler.  | <p>1900MHz body</p>  A photograph showing a ruler placed vertically inside a white phantom container filled with yellow liquid. A red arrow points to the liquid surface level on the ruler. |
| <p>750MHz head</p>  A photograph showing a ruler placed vertically inside a white phantom container filled with yellow liquid. A red arrow points to the liquid surface level on the ruler. | <p>750MHz body</p>  A photograph showing a ruler placed vertically inside a white phantom container filled with yellow liquid. A red arrow points to the liquid surface level on the ruler. |

|   |  |
|---|--|
| <p>1750MHz head</p>  A photograph showing a white, irregularly shaped object (likely a head model) placed in a white container. A vertical ruler is positioned next to the object. A red arrow points to the ruler, indicating a measurement point.  | <p>1750MHz body</p>  A photograph showing a white, irregularly shaped object (likely a body model) placed in a white container. A vertical ruler is positioned next to the object. A red arrow points to the ruler, indicating a measurement point.  |
| <p>2450MHz head</p>  A photograph showing a white, irregularly shaped object (likely a head model) placed in a white container. A vertical ruler is positioned next to the object. A red arrow points to the ruler, indicating a measurement point. | <p>2450MHz body</p>  A photograph showing a white, irregularly shaped object (likely a body model) placed in a white container. A vertical ruler is positioned next to the object. A red arrow points to the ruler, indicating a measurement point. |




## EUT PHOTOGRAPHS

All VIEW OF EUT



TOP VIEW OF EUT

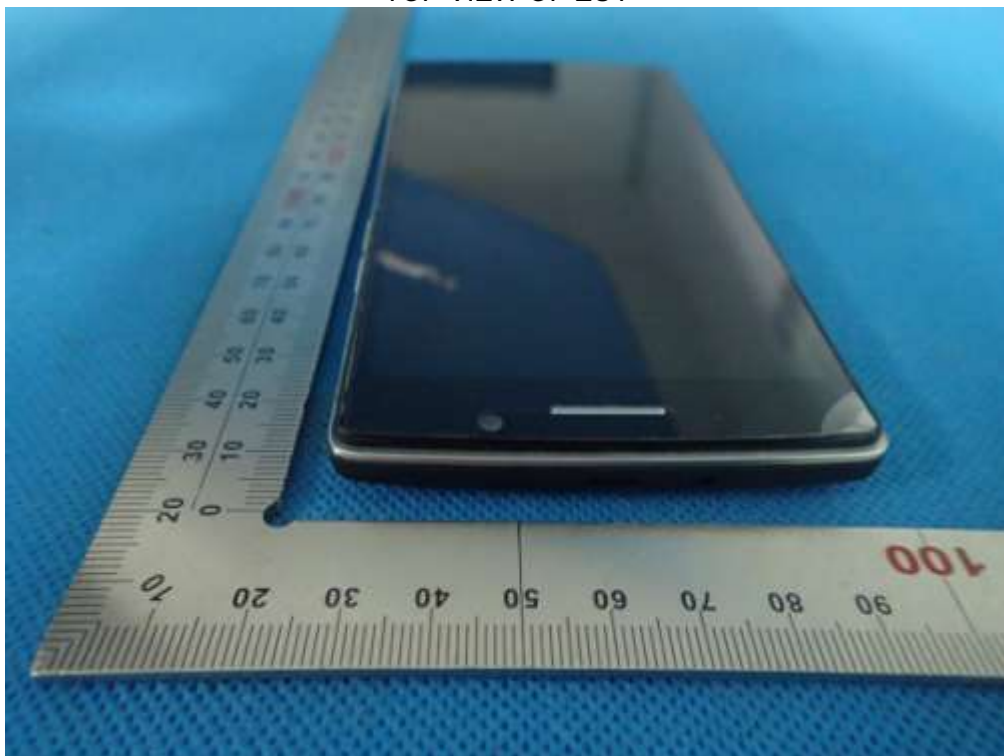

BOTTOM VIEW OF EUT



FRONT VIEW OF EUT



BACK VIEW OF EUT



LEFT VIEW OF EUT





RIGHT VIEW OF EUT



OPEN VIEW OF EUT-1



OPEN VIEW OF EUT-2



OPEN VIEW OF EUT-3






INTERNAL VIEW OF EUT-1



INTERNAL VIEW OF EUT-2

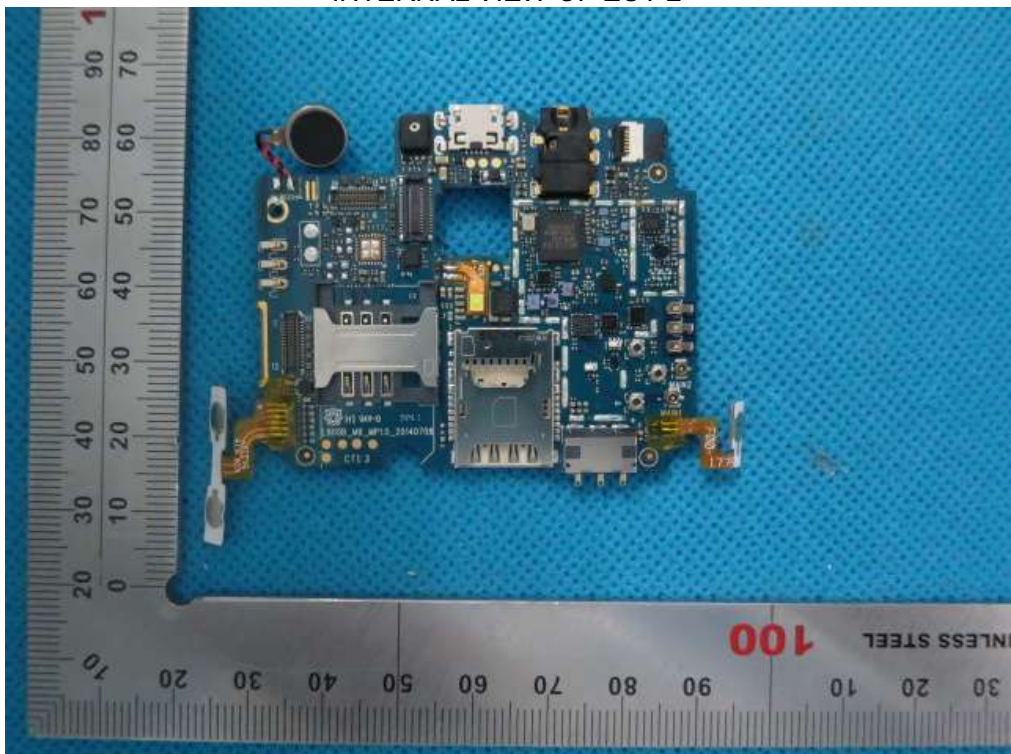



## APPENDIX D. PROBE CALIBRATION DATA



### COMOSAR E-Field Probe Calibration Report

Ref : ACR.351.1.14.SATU.A

#### ATTESTATION OF GLOBAL COMPLIANCE CO. LTD.

1&2F, NO.2 BUILDING, HUAFENG NO.1 INDUSTRIAL  
PARK, GUSHU COMMUNITY XIXIANG STREET  
BAOAN DISTRICT, SHENZHEN, P.R. CHINA  
SATIMO COMOSAR DOSIMETRIC E-FIELD PROBE  
SERIAL NO.: SN 22/12 EP159

Calibrated at SATIMO US  
2105 Barrett Park Dr. - Kennesaw, GA 30144



12/03/14

#### *Summary:*

This document presents the method and results from an accredited COMOSAR Dosimetric E-Field Probe calibration performed in SATIMO USA using the CALISAR / CALIBAIR test bench, for use with a SATIMO COMOSAR system only. All calibration results are traceable to national metrology institutions.



COMOSAR E-FIELD PROBE CALIBRATION REPORT

Ref ACR.351.1.14.SATU.A

|                      | <i>Name</i>   | <i>Function</i> | <i>Date</i> | <i>Signature</i>     |
|----------------------|---------------|-----------------|-------------|----------------------|
| <i>Prepared by :</i> | Jérôme LUC    | Product Manager | 12/3/2014   | <i>JS</i>            |
| <i>Checked by :</i>  | Jérôme LUC    | Product Manager | 12/3/2014   | <i>JS</i>            |
| <i>Approved by :</i> | Kim RUTKOWSKI | Quality Manager | 12/3/2014   | <i>Kim Rutkowski</i> |

|                       |  |
|-----------------------|--|
|                       | <i>Customer Name</i>                               |
| <i>Distribution :</i> | ATTESTATION<br>OF GLOBAL<br>COMPLIANCE<br>CO. LTD. |

| <i>Issue</i> | <i>Date</i> | <i>Modifications</i> |
|--------------|-------------|----------------------|
| A            | 12/3/2014   | Initial release      |
|              |             |                      |
|              |             |                      |
|              |             |                      |



## TABLE OF CONTENTS

|     |                                       |    |
|-----|---------------------------------------|----|
| 1   | Device Under Test .....               | 4  |
| 2   | Product Description.....              | 4  |
| 2.1 | General Information .....             | 4  |
| 3   | Measurement Method.....               | 4  |
| 3.1 | Linearity .....                       | 4  |
| 3.2 | Sensitivity .....                     | 5  |
| 3.3 | Lower Detection Limit .....           | 5  |
| 3.4 | Isotropy .....                        | 5  |
| 3.5 | Boundary Effect .....                 | 5  |
| 4   | Measurement Uncertainty .....         | 5  |
| 5   | Calibration Measurement Results ..... | 6  |
| 5.1 | Sensitivity in air .....              | 6  |
| 5.2 | Linearity .....                       | 7  |
| 5.3 | Sensitivity in liquid .....           | 7  |
| 5.4 | Isotropy .....                        | 8  |
| 6   | List of Equipment .....               | 10 |



## 1 DEVICE UNDER TEST

| Device Under Test                        |   |
|--|---|
| Device Type                              | COMOSAR DOSIMETRIC E FIELD PROBE  |
| Manufacturer                             | Satimo  |
| Model                                    | SSE5  |
| Serial Number                            | SN 22/12 EP159  |
| Product Condition (new / used)           | used  |
| Frequency Range of Probe                 | 0.3 GHz-3GHz  |
| Resistance of Three Dipoles at Connector | Dipole 1: R1=0.230 MΩ<br>Dipole 2: R2=0.226 MΩ<br>Dipole 3: R3=0.231 MΩ |

A yearly calibration interval is recommended.

## 2 PRODUCT DESCRIPTION

### 2.1 GENERAL INFORMATION

Satimo's COMOSAR E field Probes are built in accordance to the IEEE 1528, OET 65 Bulletin C and CEI/IEC 62209 standards.



Figure 1 – Satimo COMOSAR Dosimetric E field Dipole

|  |        |
|--|--------|
| Probe Length                               | 330 mm |
| Length of Individual Dipoles               | 4.5 mm |
| Maximum external diameter                  | 8 mm   |
| Probe Tip External Diameter                | 5 mm   |
| Distance between dipoles / probe extremity | 2.7 mm |

## 3 MEASUREMENT METHOD

The IEEE 1528, OET 65 Bulletin C, CENELEC EN50361 and CEI/IEC 62209 standards provide recommended practices for the probe calibrations, including the performance characteristics of interest and methods by which to assess their affect. All calibrations / measurements performed meet the fore mentioned standards.

### 3.1 LINEARITY

The evaluation of the linearity was done in free space using the waveguide, performing a power sweep to cover the SAR range 0.01W/kg to 100W/kg.



### 3.2 SENSITIVITY

The sensitivity factors of the three dipoles were determined using a two step calibration method (air and tissue simulating liquid) using waveguides as outlined in the standards.

### 3.3 LOWER DETECTION LIMIT

The lower detection limit was assessed using the same measurement set up as used for the linearity measurement. The required lower detection limit is 10 mW/kg.

### 3.4 ISOTROPY

The axial isotropy was evaluated by exposing the probe to a reference wave from a standard dipole with the dipole mounted under the flat phantom in the test configuration suggested for system validations and checks. The probe was rotated along its main axis from 0 - 360 degrees in 15 degree steps. The hemispherical isotropy is determined by inserting the probe in a thin plastic box filled with tissue-equivalent liquid, with the plastic box illuminated with the fields from a half wave dipole. The dipole is rotated about its axis (0°–180°) in 15° increments. At each step the probe is rotated about its axis (0°–360°).

### 3.5 BOUNDARY EFFECT

The boundary effect is defined as the deviation between the SAR measured data and the expected exponential decay in the liquid when the probe is oriented normal to the interface. To evaluate this effect, the liquid filled flat phantom is exposed to fields from either a reference dipole or waveguide. With the probe normal to the phantom surface, the peak spatial average SAR is measured and compared to the analytical value at the surface.

## 4 MEASUREMENT UNCERTAINTY

The guidelines outlined in the IEEE 1528, OET 65 Bulletin C, CENELEC EN50361 and CEI/IEC 62209 standards were followed to generate the measurement uncertainty associated with an E-field probe calibration using the waveguide technique. All uncertainties listed below represent an expanded uncertainty expressed at approximately the 95% confidence level using a coverage factor of k=2, traceable to the Internationally Accepted Guides to Measurement Uncertainty.

| Uncertainty analysis of the probe calibration in waveguide |                       |                          |            |    |                          |
|--|-----------------------|--------------------------|------------|----|--------------------------|
| ERROR SOURCES  | Uncertainty value (%) | Probability Distribution | Divisor    | ci | Standard Uncertainty (%) |
| Incident or forward power                                  | 3.00%                 | Rectangular              | $\sqrt{3}$ | 1  | 1.732%                   |
| Reflected power  | 3.00%                 | Rectangular              | $\sqrt{3}$ | 1  | 1.732%                   |
| Liquid conductivity  | 5.00%                 | Rectangular              | $\sqrt{3}$ | 1  | 2.887%                   |
| Liquid permittivity  | 4.00%                 | Rectangular              | $\sqrt{3}$ | 1  | 2.309%                   |
| Field homogeneity  | 3.00%                 | Rectangular              | $\sqrt{3}$ | 1  | 1.732%                   |
| Field probe positioning                                    | 5.00%                 | Rectangular              | $\sqrt{3}$ | 1  | 2.887%                   |
| Field probe linearity                                      | 3.00%                 | Rectangular              | $\sqrt{3}$ | 1  | 1.732%                   |



|   |  |  |  |  |         |
|---|--|--|--|--|---------|
| Combined standard uncertainty                       |  |  |  |  | 5.831%  |
| Expanded uncertainty<br>95 % confidence level k = 2 |  |  |  |  | 11.662% |

## 5 CALIBRATION MEASUREMENT RESULTS

| Calibration Parameters |       |
|------------------------|-------|
| Liquid Temperature     | 21 °C |
| Lab Temperature        | 21 °C |
| Lab Humidity           | 45 %  |


### 5.1 SENSITIVITY IN AIR

| Normx dipole<br>1 ( $\mu\text{V}/(\text{V}/\text{m})^2$ ) | Normy dipole<br>2 ( $\mu\text{V}/(\text{V}/\text{m})^2$ ) | Normz dipole<br>3 ( $\mu\text{V}/(\text{V}/\text{m})^2$ ) |
|---|---|---|
| 5.41  | 4.68  | 5.48  |

| DCP dipole 1<br>(mV) | DCP dipole 2<br>(mV) | DCP dipole 3<br>(mV) |
|----------------------|----------------------|----------------------|
| 102                  | 99                   | 95                   |

Calibration curves  $e_i=f(V)$  ( $i=1,2,3$ ) allow to obtain H-field value using the formula:


$$E = \sqrt{E_1^2 + E_2^2 + E_3^2}$$

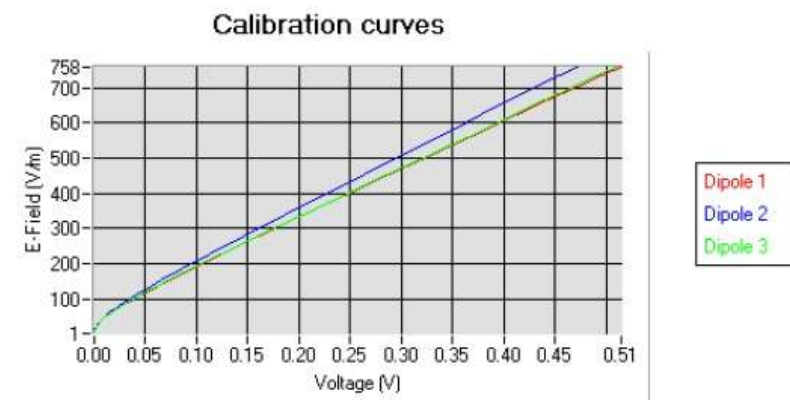





## 5.2 LINEARITY

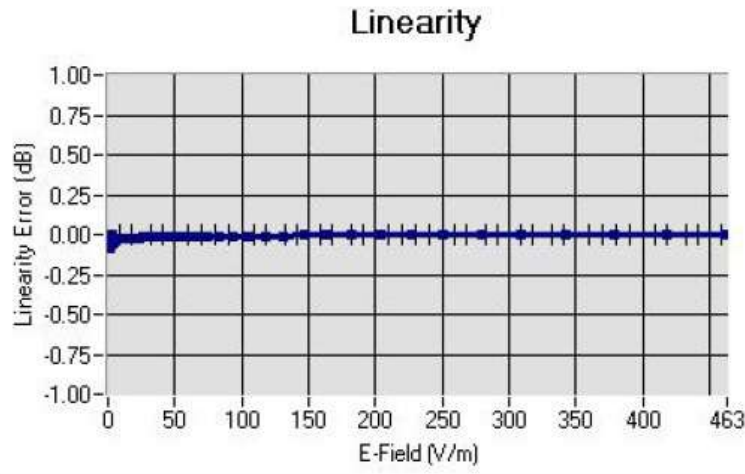

Linearity:  $\pm 1.97\%$  ( $\pm 0.09\text{dB}$ )

## 5.3 SENSITIVITY IN LIQUID

| Liquid | Frequency<br>(MHz $\pm$ 100MHz)* | Permittivity | Epsilon (S/m) | ConvF |
|--------|----------------------------------|--------------|---------------|-------|
| HL300  | 300                              | 45.37        | 0.88          | 4.37  |
| BL300  | 300                              | 58.12        | 0.95          | 4.41  |
| HL450  | 450                              | 42.99        | 0.87          | 4.51  |
| BL450  | 450                              | 56.89        | 0.93          | 4.60  |
| HL850  | 835                              | 41.28        | 0.92          | 5.03  |
| BL850  | 835                              | 55.22        | 0.98          | 5.33  |
| HL900  | 900                              | 41.03        | 0.99          | 5.07  |
| BL900  | 900                              | 55.83        | 1.06          | 5.22  |
| HL1800 | 1750                             | 39.77        | 1.41          | 4.35  |
| BL1800 | 1750                             | 53.47        | 1.55          | 4.49  |
| HL1900 | 1880                             | 39.88        | 1.41          | 4.31  |
| BL1900 | 1880                             | 53.01        | 1.54          | 4.17  |
| HL2000 | 1950                             | 39.07        | 1.47          | 4.12  |
| BL2000 | 1950                             | 52.17        | 1.55          | 4.06  |
| HL2450 | 2450                             | 39.38        | 1.87          | 4.16  |
| BL2450 | 2450                             | 52.55        | 1.97          | 4.07  |

LOWER DETECTION LIMIT: 9mW/kg

Page: 7/10


*This document shall not be reproduced, except in full or in part, without the written approval of SATIMO. The information contained herein is to be used only for the purpose for which it is submitted and is not to be released in whole or part without written approval of SATIMO.*



#### 5.4 ISOTROPY


##### HL900 MHz

- Axial isotropy: 0.04 dB
- Hemispherical isotropy: 0.08 dB

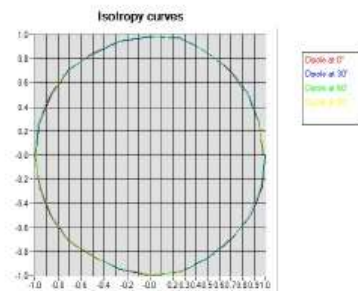

##### HL1800 MHz


- Axial isotropy: 0.07 dB
- Hemispherical isotropy: 0.12 dB

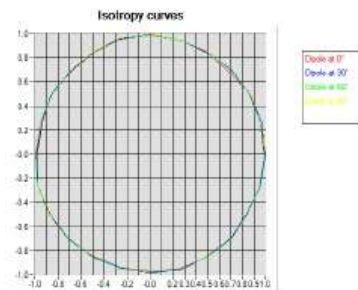



**HL2450 MHz**

|                           |         |
|---------------------------|---------|
| - Axial isotropy:         | 0.09 dB |
| - Hemispherical isotropy: | 0.14 dB |

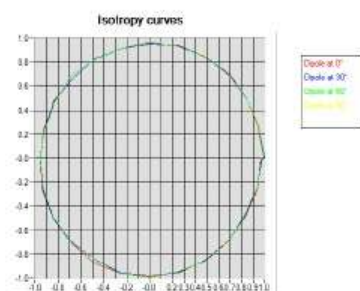



## 6 LIST OF EQUIPMENT

| Equipment Summary Sheet       |                      |                    |   |   |
|-------------------------------|----------------------|--------------------|---|---|
| Equipment Description         | Manufacturer / Model | Identification No. | Current Calibration Date                      | Next Calibration Date                         |
| Flat Phantom                  | Satimo               | SN-20/09-SAM71     | Validated. No cal required.                   | Validated. No cal required.                   |
| COMOSAR Test Bench            | Version 3            | NA                 | Validated. No cal required.                   | Validated. No cal required.                   |
| Network Analyzer              | Rhode & Schwarz ZVA  | SN100132           | 02/2013                                       | 02/2016                                       |
| Reference Probe               | Satimo               | EP 94 SN 37/08     | Characterized prior to test. No cal required. | Characterized prior to test. No cal required. |
| Multimeter                    | Keithley 2000        | 1188656            | 12/2013                                       | 12/2016                                       |
| Signal Generator              | Agilent E4438C       | MY49070581         | 12/2013                                       | 12/2016                                       |
| Amplifier                     | Aethercomm           | SN 046             | Characterized prior to test. No cal required. | Characterized prior to test. No cal required. |
| Power Meter                   | HP E4418A            | US38261498         | 12/2013                                       | 12/2016                                       |
| Power Sensor                  | HP ECP-E26A          | US37181460         | 12/2013                                       | 12/2016                                       |
| Directional Coupler           | Narda 4216-20        | 01386              | Characterized prior to test. No cal required. | Characterized prior to test. No cal required. |
| Waveguide                     | Mega Industries      | 069Y7-158-13-712   | Validated. No cal required.                   | Validated. No cal required.                   |
| Waveguide Transition          | Mega Industries      | 069Y7-158-13-701   | Validated. No cal required.                   | Validated. No cal required.                   |
| Waveguide Termination         | Mega Industries      | 069Y7-158-13-701   | Validated. No cal required.                   | Validated. No cal required.                   |
| Temperature / Humidity Sensor | Control Company      | 11-661-9           | 8/2012  | 8/2015  |